

Front view



Back view



Put the fastening plate in the place where it is to be fastened and mark the holes




Fix the plate to the wall using the installation screws.



Connect the flex hose in the inlet



Mount the urinal on the plate rail so that it is fastened as shown in the pictures

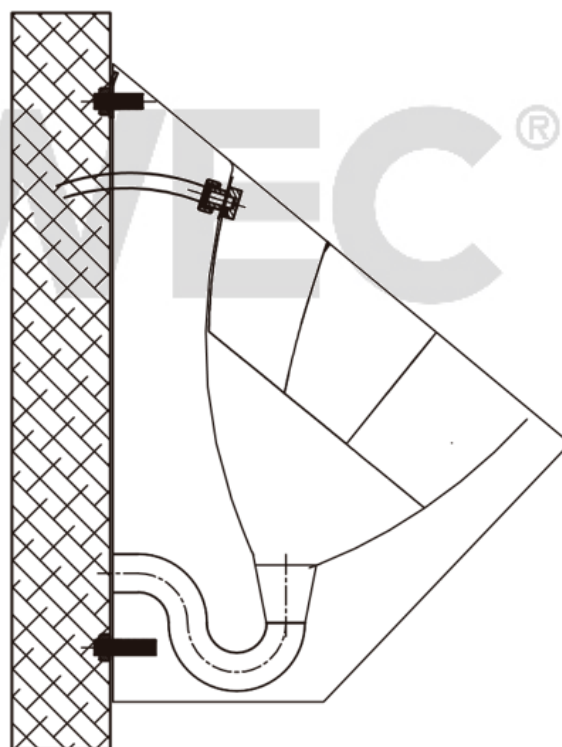

At the end of the installation, it should have the following configuration.

