

GW04 16 01 00SC Stand with automatic gel dispenser + non-contact thermometer




GW04 16 01 00SC
Grey – RAL 7035



GW04 16 01 00CB
White – RAL 9016



GW04 16 01 00CN
Black – RAL 9005

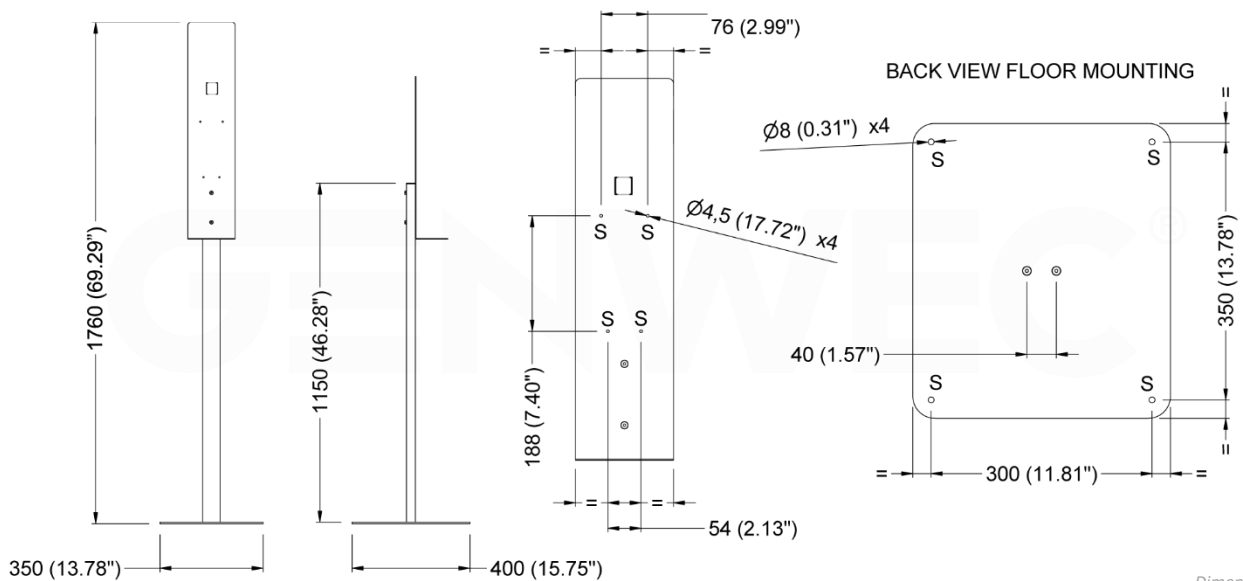

Dimensions: $\pm 3\%$

TECHNICAL DATASHEET

COMPONENTS AND MATERIALS

- Main body - Made of steel with paint coating designed for high traffic. Gray RAL 7035 paint (CB model – RAL 901, CN model – RAL 9005)

It consists of three parts to be fixed using included hardware. The base (6Kg) has 4 holes to fix the stand to the floor.

- Fixing kit - Includes 2 M6x35mm screws, 2 M6x25mm screws and self-locking nuts.

For information, please consult the technical data sheet of GW04 16 01 00 (dispenser) and GW13 50 01 00 (thermometer)

OPERATION

Place the stand in a visible and accessible position to the public. Place your hand under the sensor for a dosage of 1ml.

To use the thermometer, put the surface to measure at 5-10 cm of the sensor. Then it will show the temperature.

MOUNTING

Assemble the stand with the included hardware. Start by assembling the central column with the base using the two M6x25mm screws. Then continue with the mounting of the upper part to the central column using the two M6x35mm screws. There is the possibility of fixing the base to the floor (hardware not included).

When the stand is ready, the disinfectant and thermometer can be mounted (see GW04 16 01 00 and GW13 50 01 00).

ARCHITECTURAL SPECIFICATION

Genwec stand with automatic hand sanitizer gel dispenser GW04 16 01 00SC. The stand must be made of steel and with a special paint coating to resist the high traffic of people. The stand must be disassembled for maximum comfort in use and transport. It must include a minimum 6Kg base for its correct stability and with holes to be fixed on the floor. The stand must include a drip tray for maximum hygiene. The design of this is intended for use with the disinfectant gel dispenser GW04 16 01 00 and thermometer GW13 50 01 00 from GENWEC.

The product GW04 16 01 00SC has a 2-year warranty.

Using the stand with another dispenser invalidates the guarantee.

SPARE PARTS

Spare parts for the product GW04 16 01 00 are supplied. See its technical data sheet.