

INSTALLATION, OPERATION AND MAINTENANCE MANUAL

Pressure Reducing Valve with threaded ends



GENEBRE Ref.: 2281

INSTRUCTIONS FOR INSTALLATION, OPERATION & MAINTENANCE MANUAL

1. Product description	3
2. Transport and Storage conditions	3
3. Exploded view	4
4. Installation Instructions	
4.1 Preparation	5
4.2 Assembling	5
4.3 Commissioning	6
5. Operating Instructions	
5.1 Usage	6
5.2 Instructions for regulation	6
5.3 Capacity Chart	7
6. Maintenance Instructions	8
6.1 Cleaning of the Screen, Ball and Seat	8
6.2 Replacement of the Regulating Spring	8
7. Reparation Instructions	9
8. Hygiene and Safety Instructions	9

1. Product description.

Genebre, S.A. offers a wide range of valves designed and assembled to handwheel and drive fluids in industrial procedures.

The compatibility of materials used to build the valves (see technical specifications) and the application of valves to the different industrial processes is at user's risk. Valves will have an optimal behavior when working conditions do not exceed pressure and temperature limits (pressure curve) for which they have been designed.

2. Transport and Storage conditions



Transport and storage of this kind of products must be done keeping them in their original package!

VISUAL INSPECTION

Check whether during transport, unloading and placement the products have suffered damages.

During storage it is recommended to keep them into the included protective wrapping to avoid damages or dirt accumulation in the inside part of the valve. The wrap must not be removed until valve is to be installed.

Valves must be stored in a dry and clean environment.



If you notice any kind of anomaly during reception of the goods, contact immediately with GENE BRE in order to determine the possible responsibilities on the issue.


IMPORTANT NOTE:

Before installing and/or manipulating these elements, READ CAREFULLY these instructions for use and OBSERVE all contained information. If you fail to understand any of their content, please contact GENE BRE, S.A.



User is responsible for the safe use of these products, according to present instructions for use and specific technical documentation of the device.

3) Exploded view

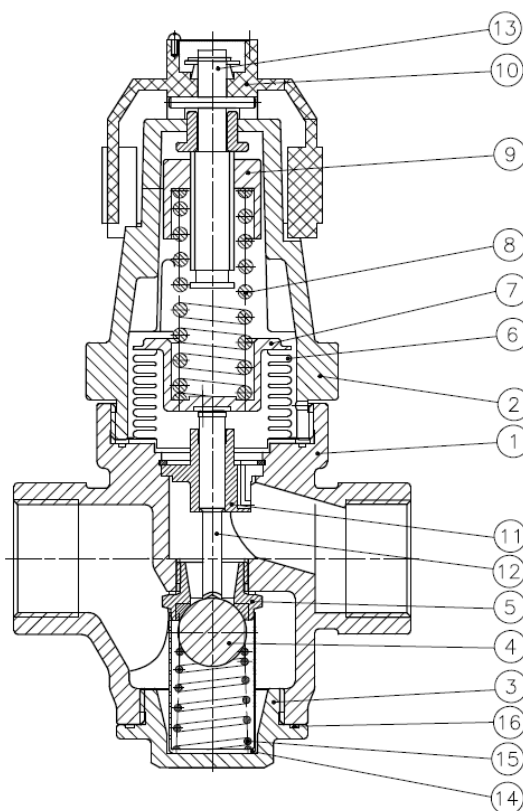

Nº	Denominación / Name	Material
1	Cuerpo / Body	Acero Inox / Stainless Steel 1.4308 (CF8)
2	Tapa / Cover	Aleación de Aluminio / Aluminium Alloy
3	Tapón / Cap	Acero Inox / Stainless Steel 1.4308 (CF8)
4	Bola / Ball	Acero Inox / Stainless Steel AISI 440
5	Asiento / Seal	Acero Inox / Stainless Steel AISI 304
6	Fuelle / Bellows	Acero Inox / Stainless Steel 1Cr18Ni9Ti
7	Recogedor / Picker	Acero Inox / Stainless Steel
8	Muelle / Spring	Acero para muelle / Spring Steel 60Si2Mn
9	Caperuza / Cap	Acero al Carbono / Carbon Steel
10	Volante / Handwheel	Tecnopolímero / Tecnopolymer
11	Placa / Plate	Acero Inox / Stainless Steel
12	Eje / Stem	Acero Inox / Stainless Steel
13	Tornillo ajuste / Set Screw	Acero al Carbono / Carbon Steel
14	Tamiz / Screen	Acero Inox / Stainless Steel
15	Muelle / Spring	Acero para muelle / Spring Steel 50CrVA
16	Junta / Gasket	PTFE

4. Installation instructions

4.1) Preparation

Remove any material remains of the valve wrapping.

Serious problems may arise with the installation of a valve in a dirty pipe.

Make sure the pipe is not dirty and doesn't have welding particles, for example, before installing it. This may cause irreparable damages in the valve when the equipment is started → *prepare a clean working area.*

Plan beforehand enough space for future maintenance operations.

4.2) Assembling

Make sure the valve's pipe and thread end are clean and are compatible one with another (type of thread end) Apply an appropriate sealing into the pipes' thread ends and thread the valve being careful not to excessively tighten the conical threaded ends.

To tighten the valve into the pipe it is recommended to use a spanner or monkey wrench only on the hexagonal area of the valves edges or in the body central assembly; the force applied needs to be less than 30 Nm.

Design for this kind of valves allows only one position for assembling it to the pipe, specified by means of an arrow in the valve's body that indicates the direction in which the fluid needs to circulate.



If possible, it is recommended to install the valve in horizontal position.

Valves do not have to support pipe's efforts, so it is advisable to anticipate a good alignment and parallelism of such pipe.

It is strongly recommended the use of filters in the pipes (upstream) for better operation, as well as to prolong the life cycle of the pressure reducing valve. On

the other hand, it is also recommended to install a pressure gauge and a shut-off valve both upstream and downstream and isolate the valve by means of a 'bypass'.

It is important that the length of straight pipe both upstream and downstream is at least 10 times the diameter of the pipe.

4.3) Commissioning

- 1- Close the shut-off valves (upstream and downstream) and bypass the steam to clean the condensate and dirt from the pipeline.
- 2- Pull the Handwheel (part. 10) of the reducing valve and turn clockwise until the maximum (this is the factory setting).
- 3- Open the downstream shutoff valve slightly and then slowly open the upstream shutoff valve.
- 4- Now the valve is ready for adjustment or regulation (see section 5.2).

5. Operating instructions

5.1) Usage

Valve materials have to be fully compatible with the fluid circulating through the valve. Otherwise, valve could be seriously damaged.

The main purpose of pressure reducing valves is to reduce the fluid pressure to optimum operating values, constantly below the maximum permitted vales so as not to damage installations after the reducing valve.

The pressure reducing valve of GENE BRE, S.A. art. 2281 is designed for use only with steam for inlet pressures not exceeding 16 bar. It has a high reduction capacity, the maximum ratio being approximately 10:1. The standard spring that comes from the factory is used to regulate the outlet pressure from 2 to 8 bar. For a regulation of 1 to 3 bar, a spring is attached to replace it if necessary. See 6.2) Replacement of the Regulation Spring.


5.2) Instructions for regulation

The pressure reducing valve is supplied at the minimum regulation pressure (0 or almost 0). To increase the outlet pressure, follow the instructions below:

- a. Prepare the installation as indicated in section 4.3) Commissioning.
- b. Pull the Handwheel (part.10) of the valve and turn counterclockwise until the desired pressure is reached.
- c. Fully open the downstream shut-off valve and recheck the outlet pressure. Rectify if necessary.
- d. Once the desired outlet pressure is obtained, release the Handwheel (part 10) so that it engages and remains locked.

5.3) Capacity Chart

Next diagram shows the discharge capacity of the PRV (art. 2281), with steam, according to the relationship between the Inlet Pressure (P1) and the Outlet Pressure (P2).

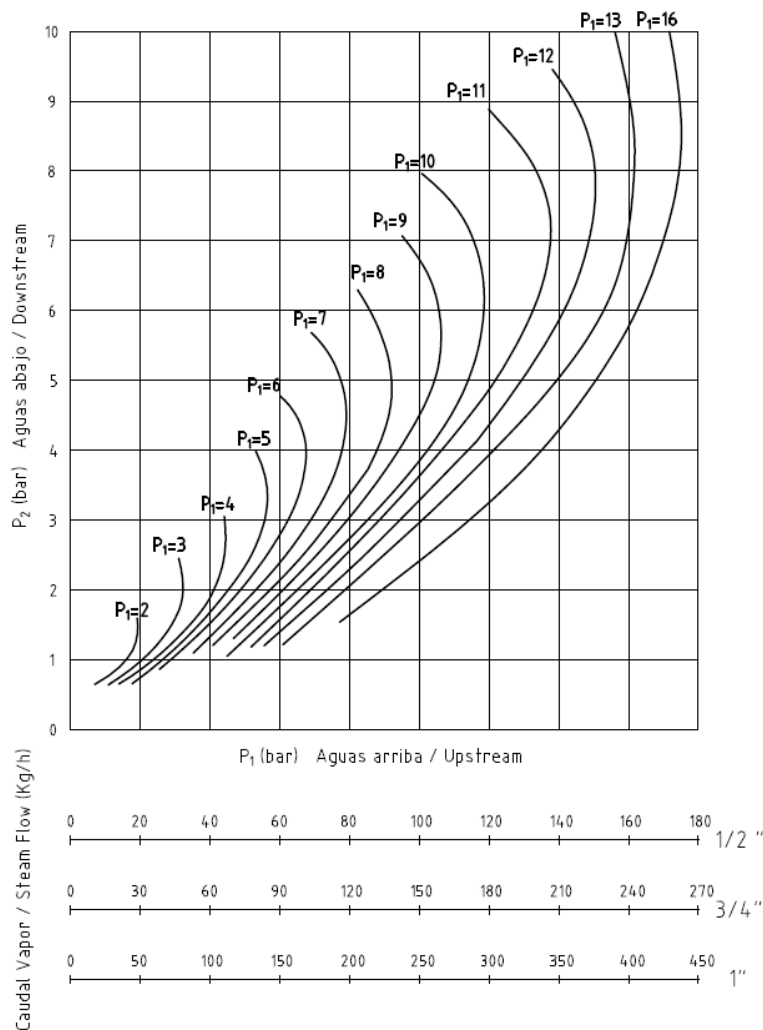

Example: a valve size 3/4" reducing from 9 bar (upstream) to 3 bar (downstream) is able to flow until 120 Kg/h of steam, approximately.

6. Maintenance instructions

Frequency, place and process of maintenance will be determined by the user by taking into account usage of the product.



Before disassembling the pipe's valve to clean or replace it, make sure that line has been closed and depressurized because a bad operational procedure could cause a serious accident to staff and installation system

6.1) Cleaning the Screen (part.14), Ball (part.4) and Seat (part.5)

- a. Fix the valve in a clamp with the handwheel facing down.
- b. Loosen the Cap (part.3) and remove the Strainer (part.14), the Spring (part.15) and the Ball (part.4).
- c. Unscrew the Seat (part.5) with a spanner.
- d. Clean the Screen with water. Use a brush if necessary. Let dry.
- e. Clean the Ball and the Seat gently with water with a non-metallic brush if necessary. Let dry.
- f. Reassemble the Seat, Ball, Spring, Screen and Cap, taking care of the Gasket (part.16).

6.2) Replacement of the Regulating Spring (part.8)

- a. Fix the valve in a clamp with the Handwheel facing up.
- b. Decompress the spring by turning the Handwheel counterclockwise.
- c. Unscrew and remove the Cover (part.2) + Handwheel (part.10) using a wrench.
- d. Replace the Spring (part.8) with a spare one that is suitable for the required regulation pressure. Use only original spare parts from GENE BRE, S.A.

- e. Reassemble the Cover (part.2) + Handwheel (part.10) using a wrench.

7. Reparation instructions

These types of valves, due to their assembling specifications are not worth repairing, because most of the times are simply not cost-effective, so we recommend to directly replace them.

However, in case that the Regulation Spring (part.8) is damaged, proceed to replace it as explained in section 6.2.



Before installing new valve, check if it meets the requirements of the valve being replaced

8. Hygiene and Safety Instructions:

8.1) Fluids that go through a valve can be corrosive, toxic, flammable or pollutant. They can also be found at very high or low temperature. When operating valves, you must follow the security instructions and it is recommended to use personal protection gadgets:

- 1) Protect your eyes.
- 2) Wear gloves and appropriate working clothes.
- 3) Wear safety footwear.
- 4) Wear a helmet.
- 5) Have running water at hand.
- 6) To operate flammable fluids, make sure you have an extinguisher at hand.



Before removing a valve from a pipe, always check if the line is completely drained and depressurized.

8.2) Always operate the valve in open position to make sure there is no pressure in the internal cavity.

8.3) Any valve being used by toxic services department needs to obtain a cleanliness certificate before being operated.

8.4) Any type of repair or maintenance should be performed in ventilated places.